

Instructions for safe use

- Only suitable for 3 1.5V AA batteries.
- Batteries are inserted with correct polarity.
- Exhausted batteries should be removed from the toy.
- Automatic shutdown after 15 minutes of no operation.
- The machine will stop working at low power.
- Must be opened and used under adult guidance.
- Screwdrivers must be used by adults.

Children's enlightenment reading machine



Instructions

Product Description

Name: Children's enlightenment reading Machine

Model: DD-01

Machine size: 230*200*20mm

Card size: 210*162mm

Product list:

1 X Children's enlightenment reading machine; 25 X

Cards; 1 X Manual; 1 X Screwdriver;

3 X AA batteries



Press and hold on

Turn on and off

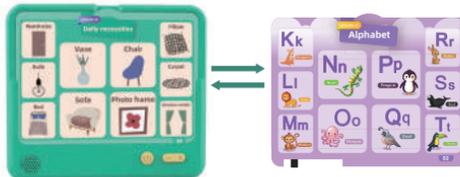
Press shortly

Adjust volume

Install batteries

When installing or replacing the battery, please use an appropriate screwdriver to open the battery compartment cover at the bottom of the toy, and correctly insert and remove the battery according to the markings in the battery compartment.

Operating Instructions

- 
 - Insert the card into the machine.
- 
 - Use your finger to touch within the wireframe to make a sound
- 
 - After learning the card, take out the card and insert a new card to continue learning.