

Instructions for safe use

- Only suitable for 3 1.5V AAA batteries.
- Batteries are inserted with correct polarity.
- Exhausted batteries should be removed from the toy.
- Automatic shutdown after 5 minutes of no operation.
- The machine will stop working at low power.
- Must be opened and used under adult guidance.
- Screwdrivers must be used by adults.



Install batteries

When installing or replacing the battery, please use an appropriate screwdriver to open the battery compartment cover at the bottom of the toy, and correctly insert and remove the battery according to the markings in the battery compartment.

Introduction to chess pieces



4 red lights form a large square chess piece.



2 blue lights form a vertical strip of chess pieces.



2 green lights form a horizontal bar-shaped chess piece.



1 orange light forms a small square chess piece.

Note: This represents 2 small square chess pieces, not long chess pieces.




Operating Instructions

- 1 Randomly publish levels within the view frame.
- 2 Move the corresponding piece through the empty space.
- 3 Move the big red chess piece to the center of the bottom by borrowing the position to successfully pass the level.

How to move? example



Press any chess piece color block that needs to be moved, and the lights of the group of shapes will flash.

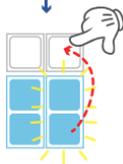

Press the blank space again. The movement of the chess piece color block is completed.

